


7. Schedule reboot function


The USB printing / sharing server has schedule reboot function. You can set when it will restart every day or weekly.

1. Enter the IP address of the server in a browser to open the background of the server and log in. The user name and password is: **admin**

The languages shown can be switched on the icon in the upper right corner.

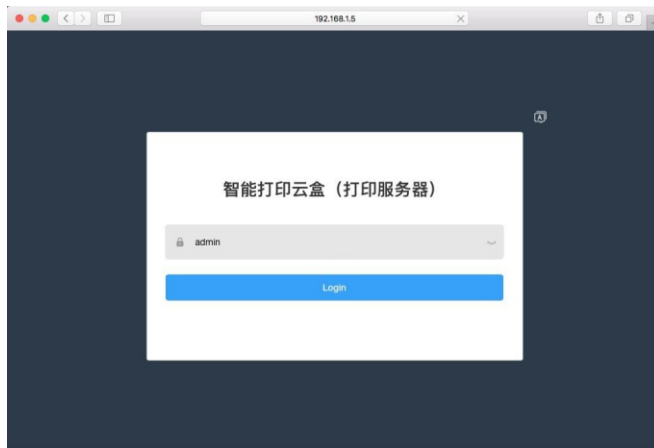

2. In the server background, to find "Schedule reboot"

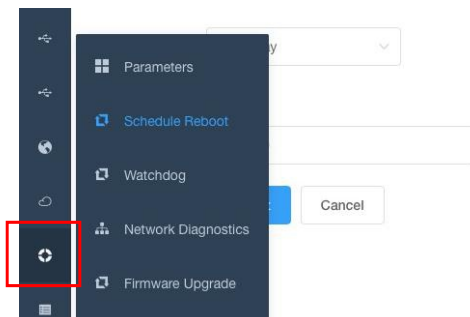

3. Click switch key on "Scheduled" right to set the reboot time of the server.

Then click "OK" and "Submit".

