

6. How to use printer / scanner through sharing USB devices

(MFP series products only)

Tips:

The same USB port cannot share USB devices and print at the same time (printer installed by standard TCP / IP port or web page link printing).


If you want to print (printer installed by standard TCP / IP port or web page link printing) when you share a USB device , you must first disconnect from the shared USB device; Sometimes you may need to restart your printer or server. To print (printer installed by standard TCP / IP port or web page link printing).

Otherwise, the USB port will be occupied by "USB Connection tools" , resulting in the inability to print (here refers to the printer through the standard TCP / IP port installed or web page link printing).

Of course, you can directly use the "USB Connection Tools" to connect the printer for printing.


Here's how to use the printer / scanner through sharing USB devices:

1. Connect to your USB device(s) through " USB Connection Tools ". Please refer to " 8. Sharing USB devices (MFP series products only) " in part 8 of the user's manual.

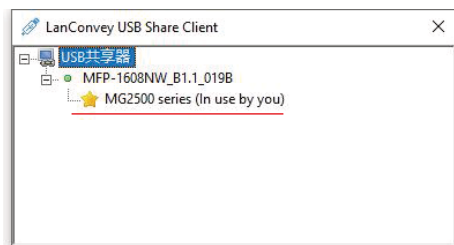

2. Install your printer or scanner driver on your PC, or you can install their drivers before connecting your USB devices (printer / scanner).

After the driver of USB device (printers / scanners) is installed, you can find them in the "Printers & Scanners" of your PC, and then you can use them.

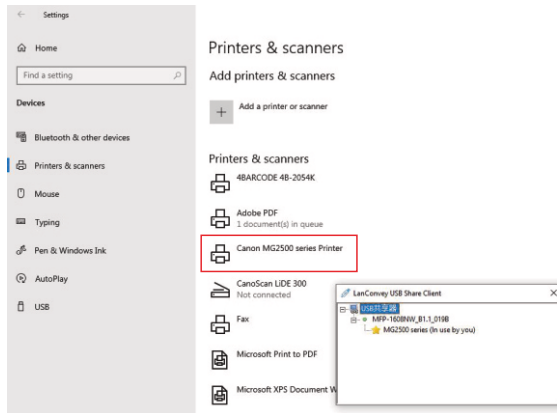

3. If you double click your USB device name in the "USB Connection Tools", your USB device will be disconnected, and you will find that your USB device (printer / scanner) will display "offline" in "Printers & Scanners" of your PC.

