

## 8. Reset the server to factory settings

When you did any wrong settings on the server, or the server accessing and connecting is abnormal, you can try to reset the server to the factory settings.

It has two ways to reset to factory settings for the server.


The one is to reset the factory settings manually. The other is to enter the server background and reset the server to factory settings.

### The way 1: manually reset to factory settings

1. Using the needle (or like something) attached with the product Insert the "RST" hole of the server and press it firmly. Wait about 5-10 seconds.

When all the indicator lights on the server is off, and when only the "SYS" light is flashing, release it.


Wait a little longer, when the "SYS" light is no longer flashing, and other indicators on the server are always on, then the server has reset to the factory settings.

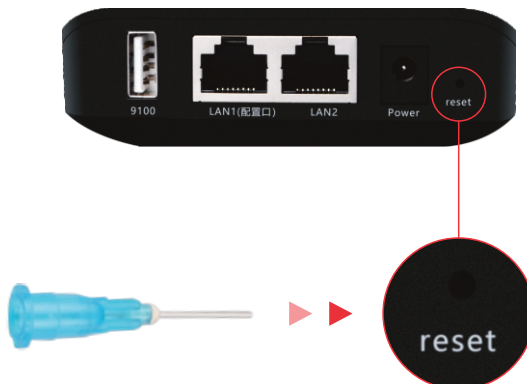


## The way 2: enter the server background to reset the server to factory settings


1. Enter the server IP address in a browser, and open the server background to log in. The user name and password are: **admin**

The languages shown can be switched with the icon in the upper right corner.

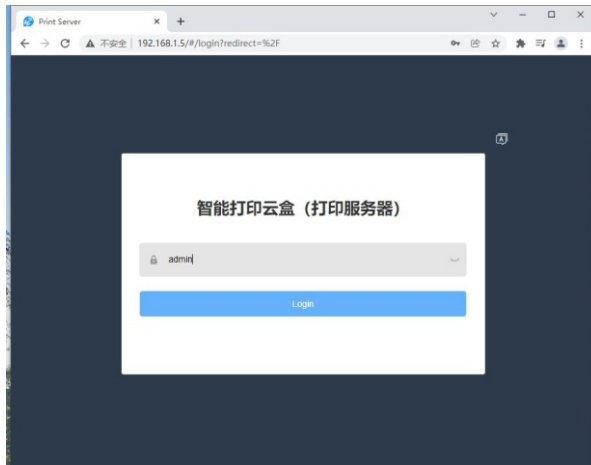

2. To find the "System"—"Reset" in the server background, and then click "Perform Reset" and wait for 30-60 seconds. The server will automatically reset to factory settings.

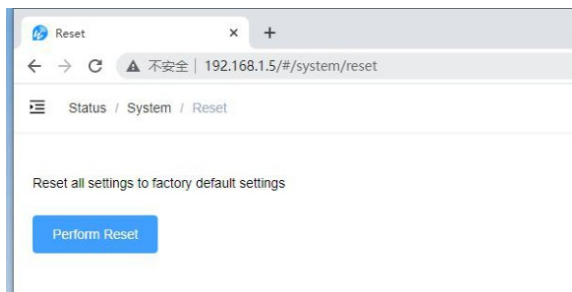

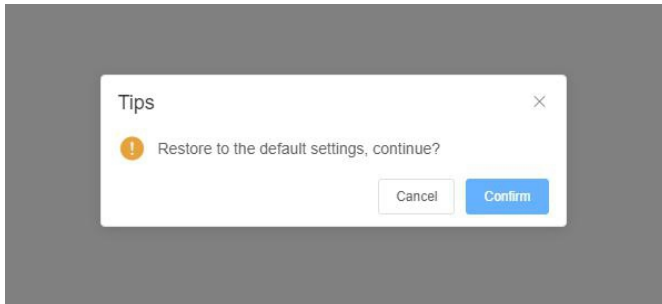

### Tips:

Please do not reset factory settings casually, because once the server reset factory settings, all the network connections of the server must be reset!

When you have made an error setting on the server or the server access connection is abnormal, and you cannot find the reason, you can reset the server to the factory settings. And reset it.