
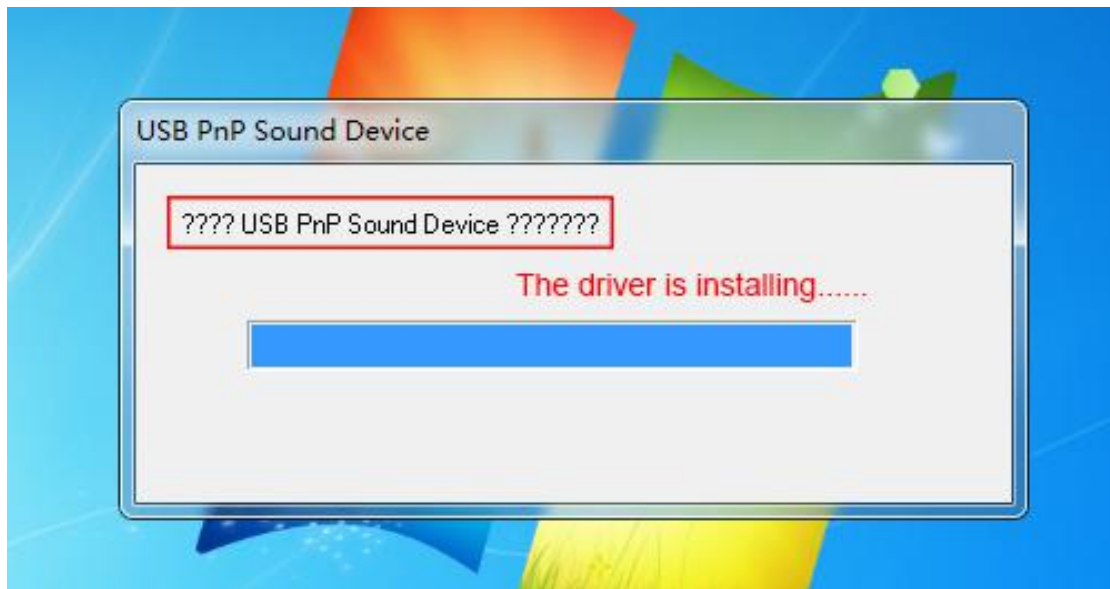



The RH-699X driver installation and setting

Only USB input signal needs to be installed with driver. Other input signals can be directly used without driver !

(No drivers need to be installed for the U disk playing)

1. First, connect the USB port of the computer and the USB port of the decoder with the USB cable.
2. Connect the power adapter powering and turn on the decoder. Press the "SWITCH" key on the front panel to set the decoder input mode and switch to **" USB "** mode. (Must connect decoder and computer and switch to " USB " mode, then we can to Install the Driver !!!)
3. Install the driver on your computer. Find the "setup.exe" in the corresponding folder for installation. Restart the computer after installation.

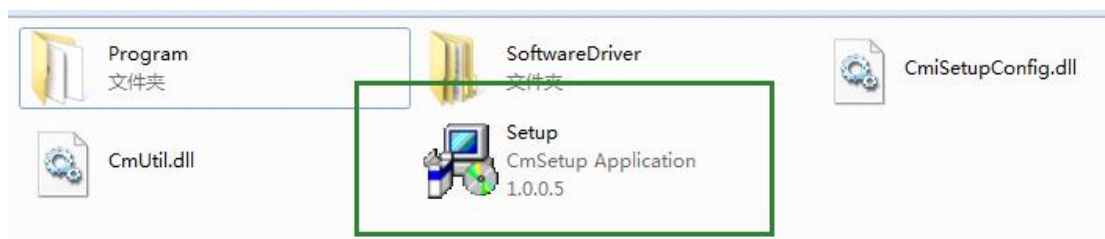

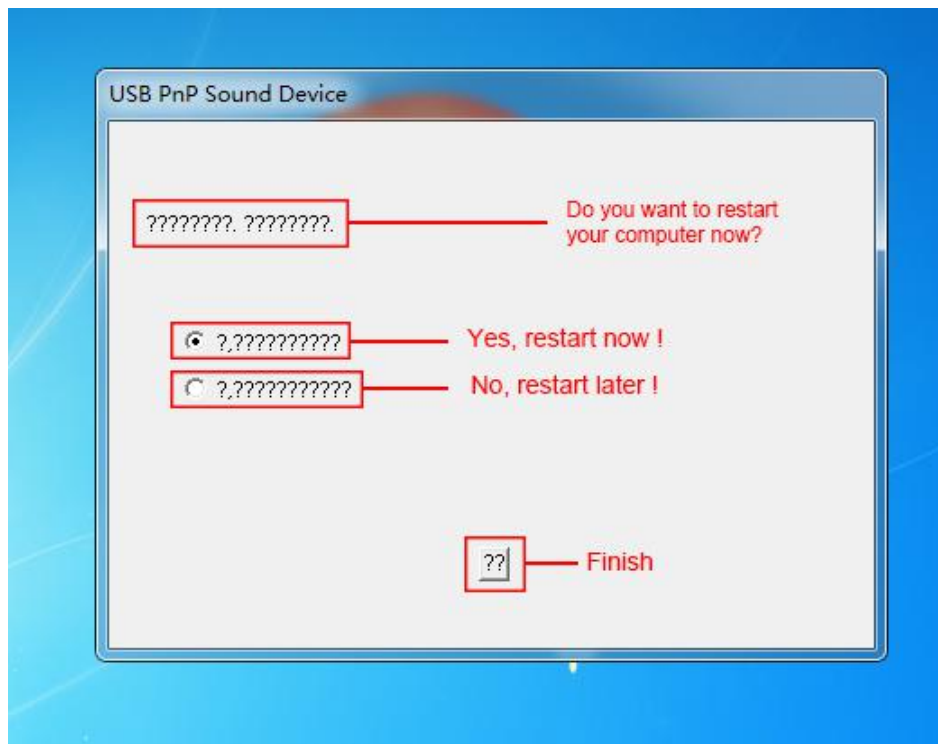


4. It can work normally After installing the driver and restarting.

Please use the professional 5.1 audio and video player to play the audio and video files, so as to get the best effect.


5.1 audio files can be played using the **"foobar 2000"** player.

****You can also use other professional players.**

- ① Open the playing window.
Choose the "Library" - "configura" from the menu.

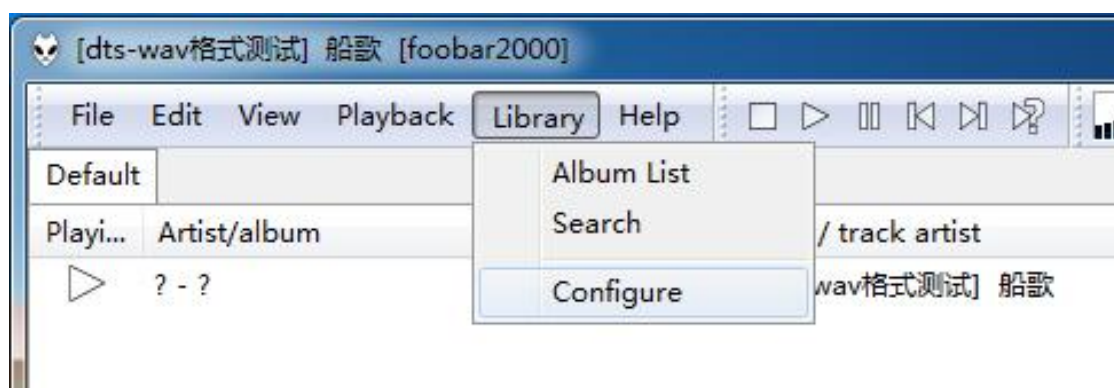

- ② Open the "configura" menu, select "playback—output" on the left, and then select the "数字输出 (USB PnP sound device)" [Digital output(USB PnP sound device)] from the right "Device" drop-down menu.

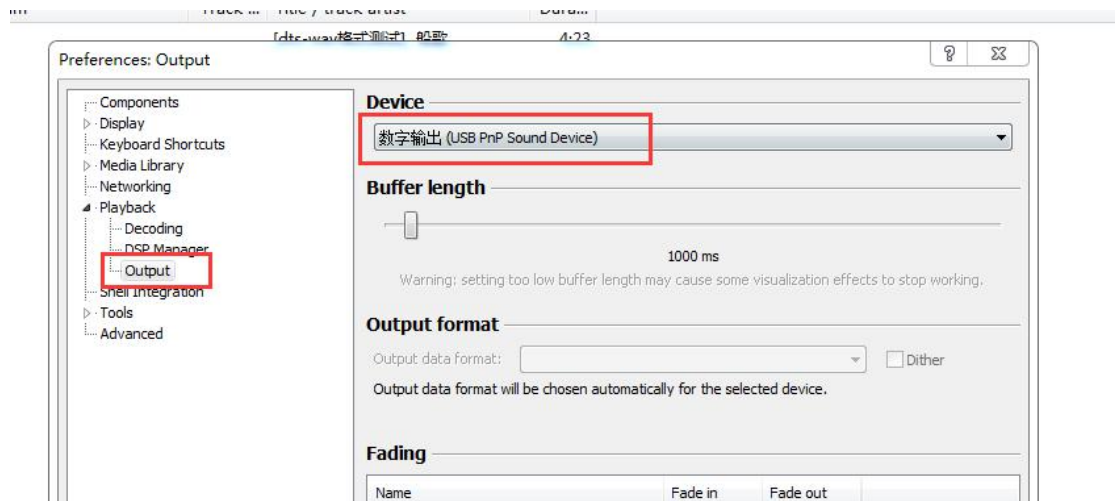

③ After setting, click "OK", and then open the audio file you need to play.

5.1 audio-video files can be played using " potplayer " player.

****You can also use other professional players.**

① Audio output select "数字输出 (USB PnP sound device)" [Digital Output (USB PNP sound device)].

The system audio playback device settings:


① Click the audio setting icon at the bottom right of the computer.



② "数字输出 (USB PNP sound device)" [Digital output (USB PNP sound device)] is seted Default device



③ Check all.

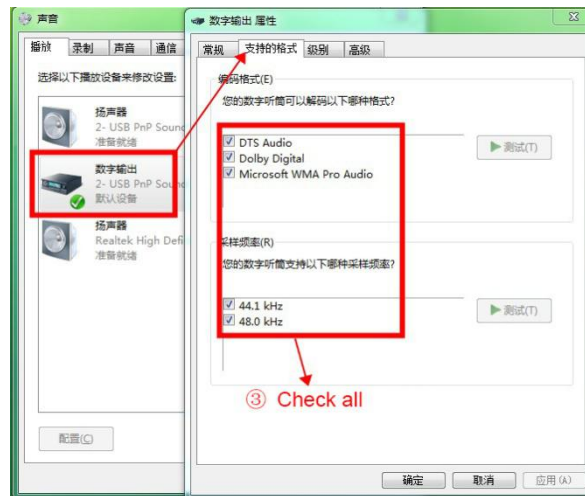

Please feel free to contact us if you have any problems during the use of the product. Thank you a lot !

E-mail: **atnedcvh@foxmail.com**